


# To properly use the C3 Device:

**RATCHET HOOK HERE!**

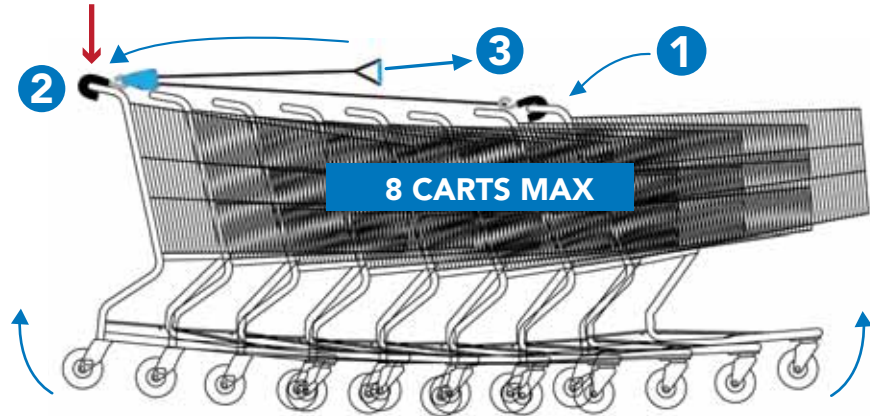

- 1 Place hook on the middle of the handle of the lead shopping cart.
- 2 Place ratchet hook securely on the middle of the handle you use to push the line of carts.
- 3 Pull the rope through the ratchet with moderate force to create lift.  
**Do not over-tighten.**



# To remove the device:

- 4 Hold on to the C3 ST EL handle.
- 5 Lift up on the cart handle while pulling the release lever at the same time.

**Easing tension on the ratchet release lever as illustrated will extend it's useful life!**

**Required PPE for your benefit and protection!**

**C3LLC.com**

